



1963-67 Corvette Fuel Level Gauge Instructions

1. Remove the factory power wire from the sender (“I” terminal).
2. Remove the factory ground wire from the sender (external ground tab).
3. Remove the sender wire from the sender (“S” terminal).
4. Connect your sender wire that you removed to the “I” terminal.
5. Connect your ground wire that you removed to the “S” terminal.

You will no longer use the original sender power wire.