


## Wiring Diagram

Series 2 Gauges (LED)

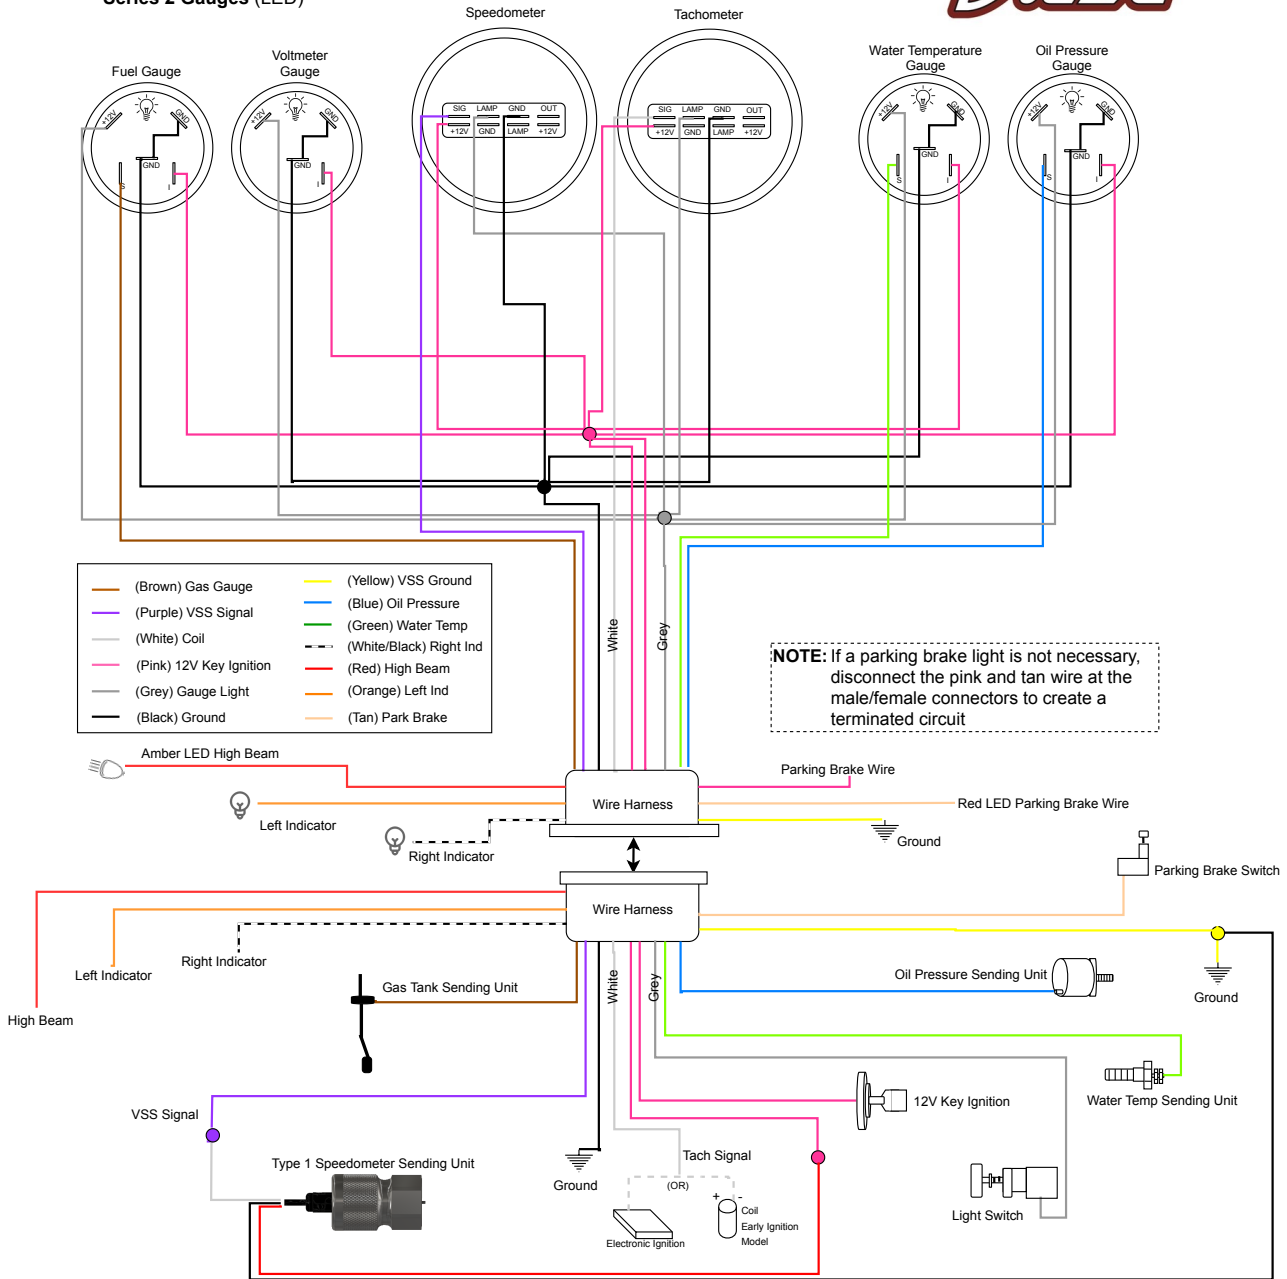

**NOTE:** When connecting the white/black/red wires of the speedometer sending unit into the circuit, it is recommended to solder the circuits together. Otherwise, the butt connectors provided in bag 5203 are suitable

**CAUTION!**  
DO NOT turn ignition on before properly grounding the speedometer

**WARNING**  
Warranty will be void if connected to coil when using an aftermarket ignition box such as, but not limited to products from the following manufacturers: MSD, Crane, Jacobs, Mallory, Holley, Etc.. Prior to installation of your tachometer, check with the ignition box manufacturer for recommended tachometer signal location

