



INSTALLATION INSTRUCTIONS 1994-04 FORD MUSTANG DASH PANEL

1996-2004 Mustangs have the **Passive Anti-Theft System (PATS)** that must be disabled before installing gauges and our Classic Dash panel. The car will not start with the factory instrument cluster unplugged unless the PATS has been disabled. The PATS can be turned off using an aftermarket custom programmer or chip. SCT has existing software to turn off the PATS.

Contact SCT at 407-774-2447 or <http://www.sctflash.com/> for help disabling PATS.

1. Remove two screws in top of factory bezel. Use small screwdriver in the slotted area of the light switch knob to release tension on spring clip while pulling forward to remove knob.
2. Pull forward on bezel from the inside bottom, detaching clips from the dash.
3. Install supplied aluminum brackets as shown in Figures 1 & 2.
4. TEST fit the Classic Dash panel without gauges to properly align the aluminum brackets.
5. Place the gauges into the Classic Dash panel in the order that you want.
6. Complete the gauge installation per each gauge instruction.
7. Install the Classic Dash Panel and show your friends!

Fig. 1 - Short Bracket

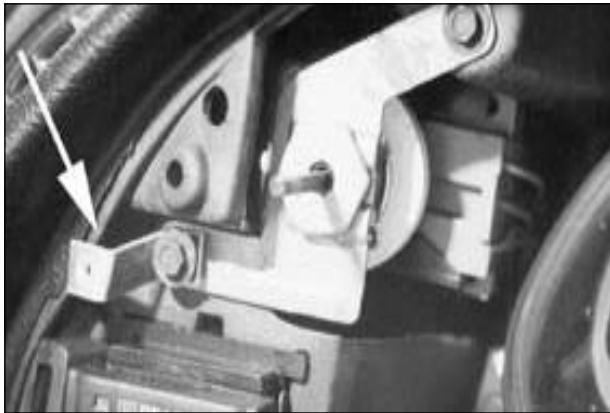


Fig. 2 - Long Bracket

