


1970-72 Chevelle Installation

The 1970-72 Chevelle Classic Dash panel is an overlay; the OEM dash panel is not removable. This dash panel will bolt directly over the top of your dash carrier.

You will need to fabricate your dash carrier to make this dash panel work in your vehicle.

- Remove the dash pad from the top of the dash carrier.
- If you are able to remove the entire dash carrier from the car, we recommend that you do so at this time. If you are unable to remove the carrier, drop your steering column or remove it so you can make the necessary alterations.
- You will need to cut out the area directly above your steering column, where your gauges are right now. This can be accomplished by using any typical reciprocating saw or Dremel or any other cutting tool that has variable speeds.

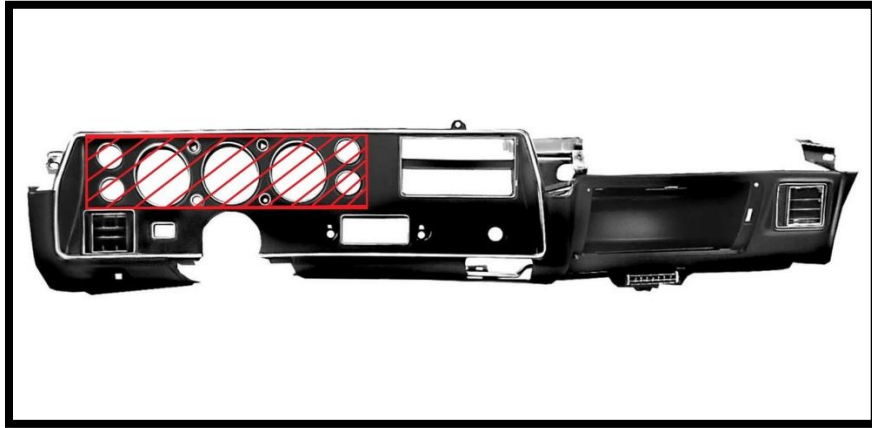

- Once you have cut out the area above the steering column, you should be able to install your gauges into our dash panel and then install the dash panel into the dash carrier.
- Use the included attachment kit to bolt up your new Classic Dash panel to your dash carrier.

